


INDICATORS & SWITCHES

LEVEL

- | | |
|-----------------------------------|-------------------------------|
| 1) Capacitance Level Indicator | 7) Side Mounting Float Switch |
| 2) Ultrasonic Level Indicator | 8) Flow Switch |
| 3) Capacitance Level Switch | 9) Pressure Level Indicator |
| 4) Cable Float Level Switch | 10) Mini Float Level Switch |
| 5) Magnetic Float Level Indicator | 11) By-Pass Level Indicator |
| 6) Magnetic Float Level Switch | |

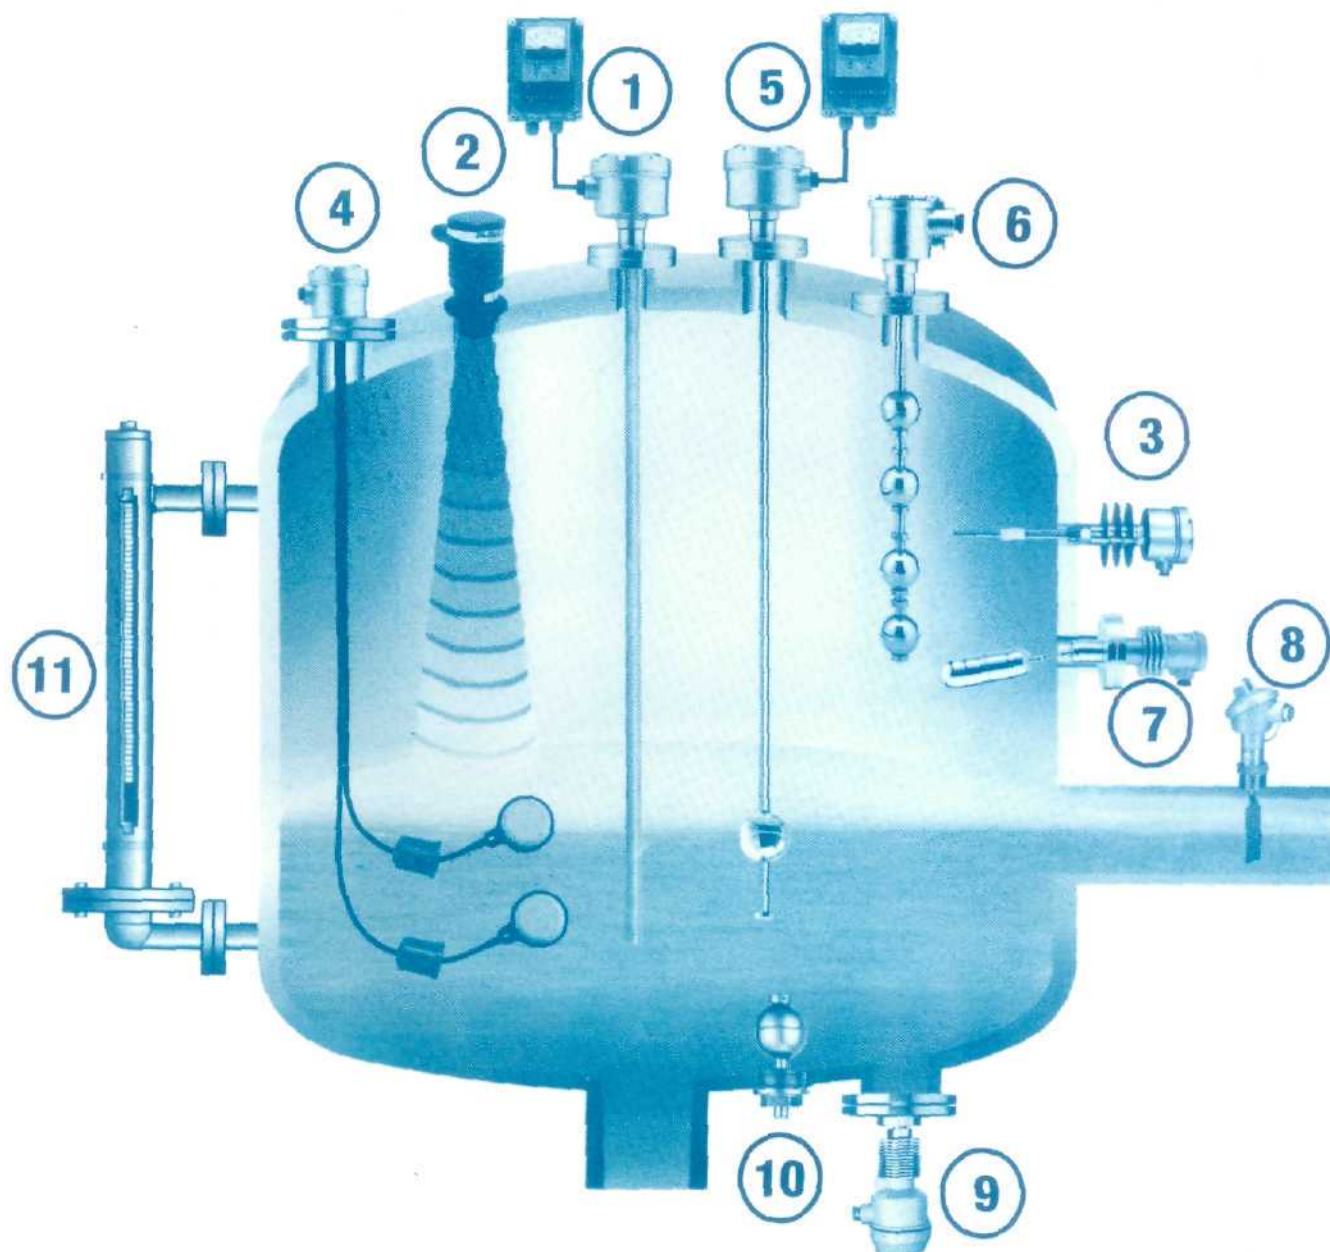

FAIRFIELD ENGINEERS

204, NAGDEVI STREET, MUMBAI - 400 003.
TEL.: 6633 6259, 2340 156S. FAX: 91-22-2341 4462.
email: fairfieldengineers@gmail.com
website: www.fairfieldengineers.com